

SPARE REPLACEMENT SLATS

Please note that as with all Natural Wood products, variations in grain, texture and colour along with some slight warpage may occur. These are an inherent characteristic of real wood blinds.

Warpage of individual slats is most likely to occur in the first few weeks after fitting and can be as a reaction to the change in atmospheric conditions or humidity. We have supplied you with some spare slats and we recommend that you keep these to replace any slats that may warp.

TO REPLACE SLATS

1. Remove the cord locks on the underside of the bottom rail.
2. Pull the central lift cords through the holes punched in the slats as required.
3. Remove and replace the warped slat/s.
4. Re-cord lift control down through the punch holes in all slats and bottom rail and tie to secure.
5. Re-fit cord locks.

TO INSTALL VALANCE

After your blind has been fitted, attach the wood valance to the plastic clips.

Accessories Enclosed:



- 1) 2 x mounting brackets placed at both ends of headrail
- 2) 1 x attachable valance
- 3) Plastic Valance Clips
- 4) Centre Supports if required

CHILD SAFETY

Child Safety devices are supplied to reduce access hanging cords, Please read the instructions attached to the blind carefully.




WOOD SLAT BLINDS FITTING INSTRUCTIONS

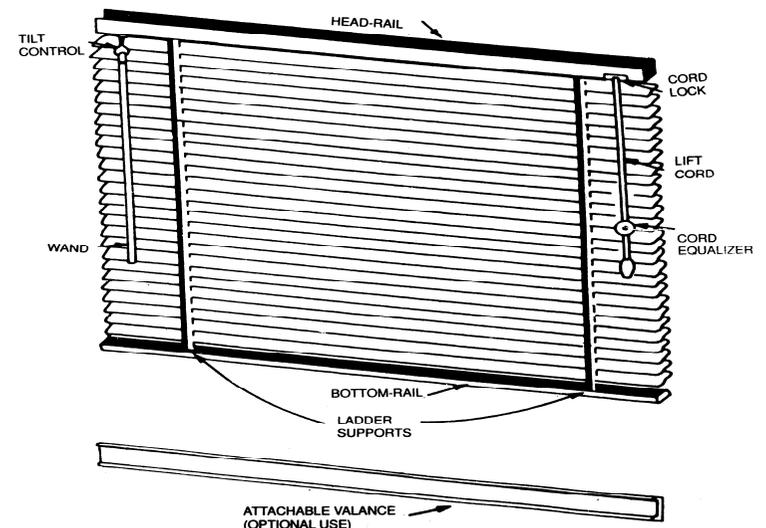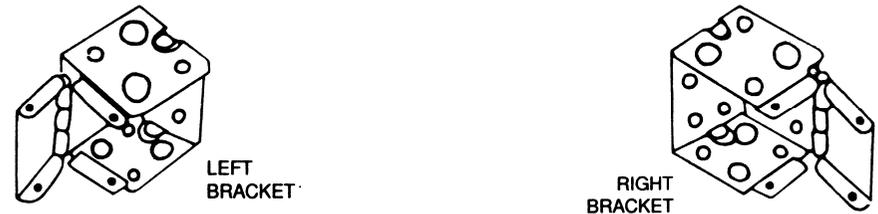


HOW TO INSTALL

- 1) Select the method of mounting that best suits your purpose.
(See illustrations A, B, C)


A. Inside mounting to the inside or between the sides of the window frame.

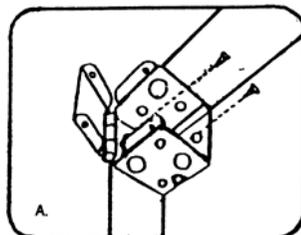

B Outside mounting to the face or outside the window frame.

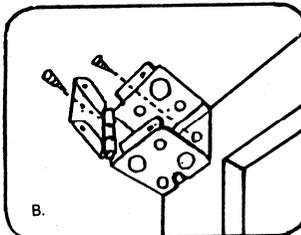

C Ceiling mounting to an overhead surface such as the top inside of the window frame or the ceiling.

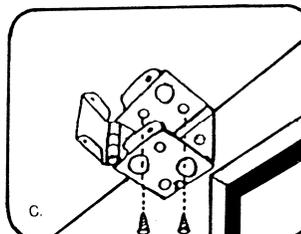


- 2) Measure where you want the blind to hang, make sure that the blind is centred and level. When it is positioned properly, make a small pencil mark at each side of the blind to show where you attach the mounting brackets.
- 3) Hold one bracket with the 'door' section opening to left on left side of blind /right on right side of blind at desired height and width you have chosen and mark the screw holes with a pencil. Then insert and tighten screw through bracket slot.
- 4) After the first bracket is mounted, carefully position and attach the second bracket. Double check to be sure it is level with the first bracket and that the brackets are the proper distance apart.

- 5) Some larger blinds do require additional support. An L-shaped centre support bracket will be included with your blind if this is the case.

- 6) If your blind is being fitted into a recess, then it is advised that you attach the valance clips onto the headrail before fixing the blind into the end brackets.

- 7) Pick up the blind and slide the headrail into the brackets. Make sure that the blind cord and tilt cords mechanism faces toward you. Close the front cap/door on each bracket.
(See illustration D)

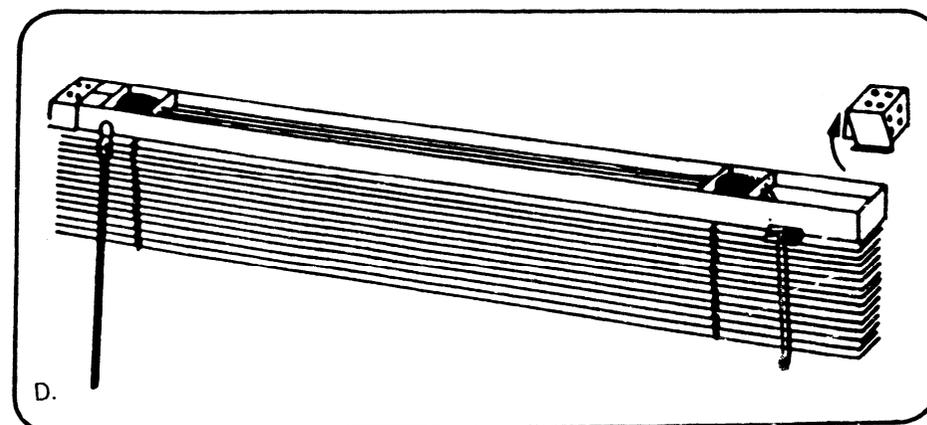

TO OPERATE BLINDS

Lowering: Hold cord at eye level and move to the left, pulling down gently until cord lock releases. Allow cord to slip through fingers until blind reaches desired level. Move pull cord to the right and release. Blind will lock automatically.

Raising: Pull cord downward until blind reaches desired height, release cord. The blind will lock automatically. The lift cord is generally located on the right hand side of the blind.

Tilting: Pull one cord gently to rotate the slats to the required angle. Pulling the other cord will reverse the action. The tilt cords are generally located on the left hand side of the blind.