

# R1723 6 CHANNEL 18 SETTINGS TIMER REMOTE CONTROL




## FOR USE WITH R1710 MOTOR

operating instructions


### SETTING THE TIME

1st time or re-setting


BATTERY SPECIFICATION: Li-ion battery, 2000mAH, 7.4V.  
MOTOR TORQUE/SPEED: 1.1Nm/25rpm

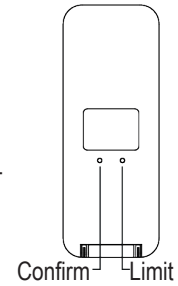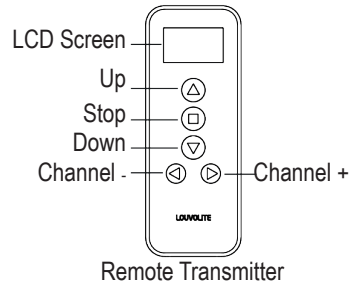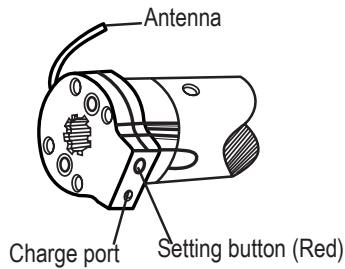


1. Ensure Remote is in Manual mode, this can be changed using .

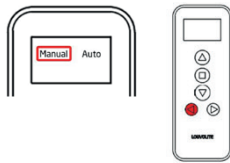


2. Press and hold Limit and until a time appears.

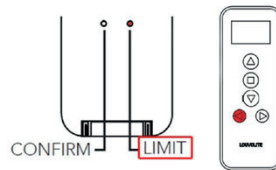

3. Press until hour flashes.




4. To set hour time press either Up or Down to navigate to correct hour time.



5. Press to confirm, display will automatically move to Minute Time setting.




6. To set Minute Time use either Up or Down to navigate to the correct minute time.



7. Press to confirm, display will automatically move to Day setting.



8. Use either Up or Down to navigate to the Day of setting.



9. Press to confirm.




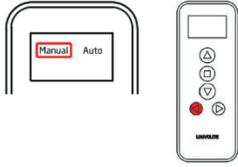
10. Press & hold until display flashes, release . Time and Day is set.




LOUVOLITE

# PARING THE HANDSET AND MOTOR


1. Ensure remote is in Manual mode, this can be changed using .




2. Press  until desired channel is selected (1 - 6).






3. Press and hold the Red button on the motor until it Jogs Twice (up once/down once).

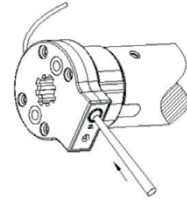


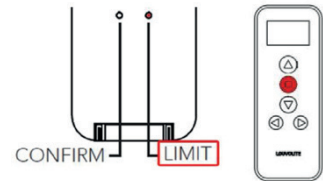
4. Press Confirm on the handset until the motor jogs twice (up once/down once).

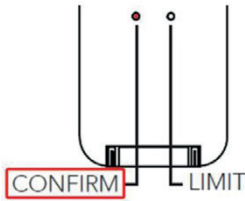


5. To check blind/motor press either Up  or Down  to confirm correct direction of motor.





NOTE: If the blind is travelling in opposite direction press and hold Limit and Stop  simultaneously until the motor jogs twice.



# SETTING THE BLIND LIMIT


1. Ensure remote is in Manual mode, this can be changed using .

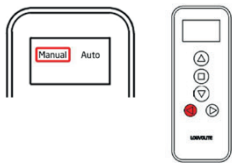


2. Press  until desired channel is selected (1 - 6).





3. Press and hold Limit until motor jogs four times (up once/down once/up once/down once).

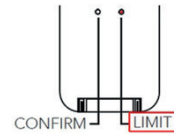




4. Press Up , the blind should move upwards.




5. Press Stop  when the blind is close to top limit position.




6. To position exactly press either Up  or Down  until satisfied with top limit position of Blind.





7. Press Confirm. The motor will jog twice (up once/down once), the top limit position is now set.

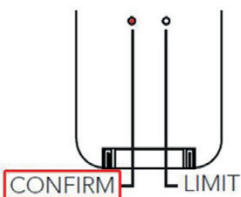


8. Press Down . The blind should move downwards.




9. Press Stop  when the blind is close to the bottom limit position.



10. To position exactly press either Up  $\triangle$  or Down  $\nabla$  until satisfied with bottom limit position of blind.



11. Press Confirm. The motor will jog twice (up once/down once), bottom limit position is now set.

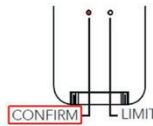


12. Both top and bottom limit positions of the blind have been set, to operate using the handset ensure this is in Manual mode.

## SETTING THE BLINDS LIMITS


### mid position setting

1. Ensure Remote is in Manual mode, this can be changed using  $\leftarrow$ .

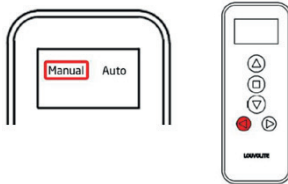


2. Move blind to the desired Mid-Position.

3. Press Limit and Up  $\triangle$  simultaneously until the motor jogs twice (up once/down once).

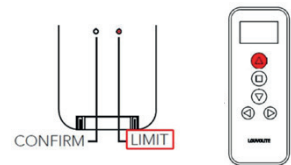

4. To operate the mid position press and hold Stop  $\square$  until the blind moves.




5. Repeat 'Setting the Blind Limits' for more blinds.


## PROGRAMMING A BLIND

We recommend making a note of desired programming channels, day, hour and minute times before proceeding (see table at end of Instructions).

1. Ensure remote is in **Auto** mode, this can be changed using  $\leftarrow$ .

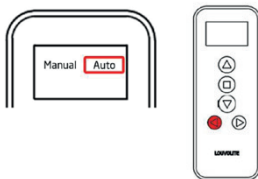


2. Press Limit and  $\triangle$  simultaneously until display flashes, the number 1 will appear.

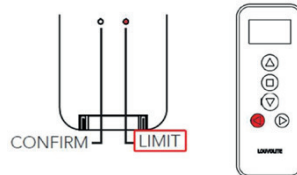


3. Press  $\triangleright$  and the blind channel number on the handset. Display will flash.



4. To move between blind channel numbers, use either Up  $\triangle$  or Down  $\nabla$ .



5. Press Stop  $\square$  to add a channel or use either Up  $\triangle$  or Down  $\nabla$  to navigate to required channel or to add additional blinds channels.

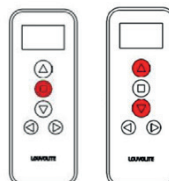


6. Press  $\triangleright$  to confirm movement(s).




7. Display will automatically move onto day settings.


8. Day will flash; Press either Up  $\triangle$  or Down  $\nabla$  to select day, press Stop  $\square$  to confirm selections.

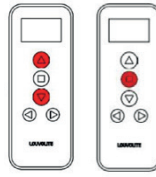

9. Press  $\triangleright$ . Hour Time on display will automatically flash.




10. To set hour time press either Up  $\triangle$  or Down  $\nabla$  to navigate to correct hour time.




11. Press Stop  $\square$  to confirm selection, Minute Time will automatically flash on display.



12. To set Minute Time, press either Up  $\triangle$  or Down  $\nabla$  to navigate to correct minute time then press Stop  $\square$  to confirm.

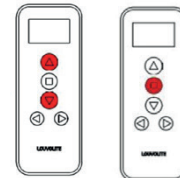

13. To select Blind Direction select either Up, Down or Mid Position, to navigate press either Up  $\triangle$  or Down  $\nabla$  then Press Stop  $\square$  to confirm selection.

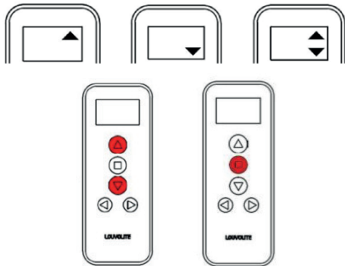


14. If the display on the handset is no longer flashing, everything is set.

15. Press and hold  $\triangleleft$  until Time on Display flashes, next "No (Number)" will appear.



If you have set all the blinds required then go to Step 16, to set further blinds repeat from step 3.

16. Note: You can press Confirm to exit the programming mode if the timing data is complete.

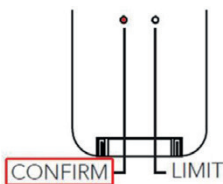

Blind Channel	Day	Hour	Minute	Up/Down Mid Position
Example: 1	Monday	8	00	Up