


1. Fitting tools required include scissors and Bracket Insertion Tool (TP483)




2. Position top fixing bracket into the purpose made slot in the Bracket Insertion Tool.

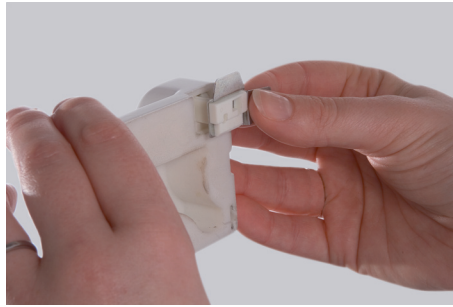

3. Position bracket behind rubber bead and carefully push the metal legs behind the bead.



4. Check bracket is squarely secured. Repeat both sides.

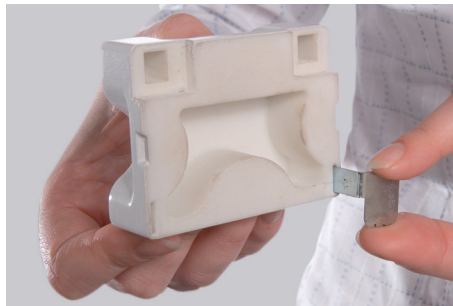

5. Position bottom fixing bracket into the purpose made slot in the Bracket Insertion Tool.



6. Position bracket behind rubber bead and carefully push the metal leg behind the bead.



7. Check bracket is vertically secured. Repeat both sides.




8. Place the side profile\* against the side frame with flat face towards the glass and the notch to the bottom.



9. Slide the top edge into the slot of the bracket. Push profile fully into position.



10. Slide bottom slot of profile over the bottom bracket. Repeat both sides.

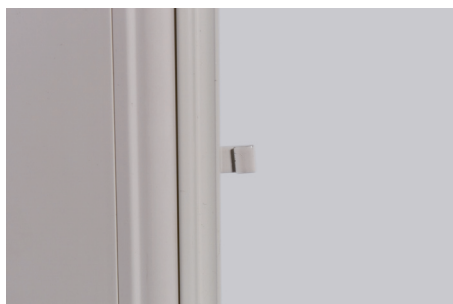


11. At the appropriate position(s) on each side profile, fit retention clips (long side profiles only).



12. Press home using the insertion tool. Fully located the clip will sit over the side profile.

\* The blind and side profiles may be packed separately. Each will be identified.

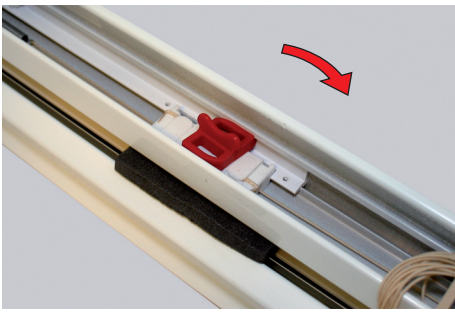

13. Remove transit packing piece by rotating clockwise (Venetian blinds only).



14. With rubber bands in place, align the headrail end cap slot with bracket arms.



15. Ensure headrail is correctly aligned and firmly press home.



16. Snip off the rubber bands and carefully lower the slats to the bottom frame.



17. With cord at bottom of bracket, slide onto clip. Repeat both sides.



18. To align the bottomrail horizontally, simply pull it into the position desired. It will stay in position under tension from the cords. Align bottomrail to the horizontal.



19. Check the blind operation, raise/lower and open/close is satisfactory.

## INTU® Pleated & Cellular

The steps required to fit INTU® Pleated or Cellular blinds are the same as for INTU® Venetian up to step 16. From step 17 on, follow the instructions below



17. With cord at bottom of bracket, slide onto clip. Repeat both sides.



18. To align the bottomrail horizontally, simply pull it into the position desired. It will stay in position under tension from the cords. Check the blind operation, raise/lower is satisfactory.

If you require further advice or more information on INTU® blinds please call 0141 814 3508 or email [info@eclipse-blinds.co.uk](mailto:info@eclipse-blinds.co.uk)

Turnils (UK) Ltd Inchinnan Business Park Renfrew PA4 9RE Scotland UK

Phone: +44 (0) 141 812 3322 Fax: +44 (0) 141 812 5253

[www.turnils.com](http://www.turnils.com)